INSTRUCTIONS

Les Filtres Bleus Hautes Performances





FOR ANYTHING WITH A WORKING ENGINE THAT BREATHES AIR


. SET THE CO RIGHT AFTER 30 MILES USF

Mechanical fuel injection engines Carburettor engines

Two & four stroke engines

NO SETTING REQUIRED


Electronically controlled fuel injection Diesel and turbo charge diesel

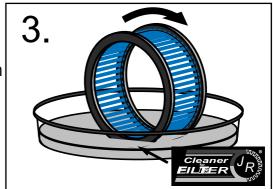


4 MAINTENANCE


CAUTION

- . Do not use petrol, high air
- . pressure, steam or solvents
- . For cleaning

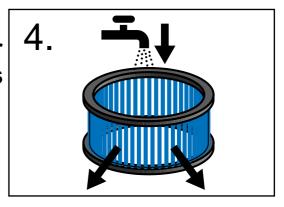

 - 1.- Remove the filter and tap lightly to dislodge dirt.
- 2.- Wet the filter lightly with cold water.
- 3.- Roll the filter in a shallow bowl containing **JR FILTER CLEANER**, without allowing the inside of the element to become wet. Remove and leave for 15 minutes whilst the remaining dirt dissolves.
- 4.- Rinse off with warm water (not high pressure) from the inside outwards, washing away the dirt remnants.
- 5.- Allow the filter to dry naturally.
- 6.- Spray the filter lightly with JR OIL SPRAY and check for an even light blue colour.
- 7.- Refit the filter.



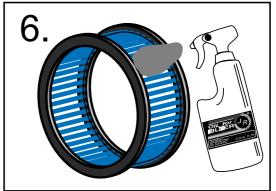

JR FILTERS

Z.A. RUE GALLIENI - 62150 HOUDAIN - FRANCE TEL: 0033 3 21 61 80 89 - FAX: 0033 3 21 61 80 85

SERVICE